



# eSure™ Rectifier Module

## User Manual

Specification Number: 1R482000e3

Model Number: R48-2000e3

The information contained in this document is subject to change without notice and may not be suitable for all applications. While every precaution has been taken to ensure the accuracy and completeness of this document, Vertiv assumes no responsibility and disclaims all liability for damages resulting from use of this information or for any errors or omissions. Refer to other local practices or building codes as applicable for the correct methods, tools, and materials to be used in performing procedures not specifically described in this document.

The products covered by this instruction manual are manufactured and/or sold by Vertiv. This document is the property of Vertiv and contains confidential and proprietary information owned by Vertiv. Any copying, use or disclosure of it without the written permission of Vertiv is strictly prohibited.

Names of companies and products are trademarks or registered trademarks of the respective companies. Any questions regarding usage of trademark names should be directed to the original manufacturer.

### **Technical Support Site**

If you encounter any installation or operational issues with your product, check the pertinent section of this manual to see if the issue can be resolved by following outlined procedures.

Visit <https://www.vertiv.com/en-us/support/> for additional assistance.

## TABLE OF CONTENTS

|   |           |
|---|-----------|
| <b>Admonishments Used in this Document</b> .....                  | <b>iv</b> |
| <b>Important Safety Instructions</b> .....                        | <b>v</b>  |
| Safety Admonishments Definitions.....                             | v         |
| Safety and Regulatory Statements.....                             | v         |
| Déclarations de Sécurité et de Réglementation.....                | v         |
| <b>1 Introduction</b> .....                                       | <b>1</b>  |
| 1.1 Overview.....   | 1         |
| 1.2 Specifications.....   | 1         |
| <b>2 Operation</b> .....  | <b>11</b> |
| 2.1 AC Input Protection Device Requirements/Recommendations ..... | 11        |
| 2.2 Local Indicators .....  | 11        |
| 2.3 Rectifier High Voltage Shutdown and Lockout Restart .....     | 11        |
| 2.4 Rectifier Current Limit.....                                  | 12        |
| 2.5 Installing Rectifiers.....                                    | 12        |
| <b>3 Troubleshooting and Repair</b> .....                         | <b>13</b> |
| 3.1 Troubleshooting.....  | 13        |
| 3.2 Replacement Procedures.....                                   | 15        |

## Admonishments Used in this Document



**DANGER!** Warns of a hazard the reader *will* be exposed to that will *likely* result in death or serious injury if not avoided. (ANSI, OSHA)



**WARNING!** Warns of a potential hazard the reader *may* be exposed to that *could* result in death or serious injury if not avoided. This admonition is not used for situations that pose a risk only to equipment, software, data, or service. (ANSI)



**CAUTION!** Warns of a potential hazard the reader *may* be exposed to that *could* result in minor or moderate injury if not avoided. (ANSI, OSHA) This admonition is not used for situations that pose a risk only to equipment, data, or service, even if such use appears to be permitted in some of the applicable standards. (OSHA)



**ALERT!** Alerts the reader to an action that *must be avoided* in order to protect equipment, software, data, or service. (ISO)



**ALERT!** Alerts the reader to an action that *must be performed* in order to prevent equipment damage, software corruption, data loss, or service interruption. (ISO)



**FIRE SAFETY!** Informs the reader of fire safety information, reminders, precautions, or policies, or of the locations of fire-fighting and fire-safety equipment. (ISO)



**SAFETY!** Informs the reader of general safety information, reminders, precautions, or policies not related to a particular source of hazard or to fire safety. (ISO, ANSI, OSHA)

# **Important Safety Instructions**

## **Safety Admonishments Definitions**

Definitions of the safety admonishments used in this document are listed under “Admonishments Used in this Document” on page iv.

## **Safety and Regulatory Statements**

Refer to Section 4154 (provided with your customer documentation) for Safety and Regulatory Statements.

## **Déclarations de Sécurité et de Réglementation**

Reportez-vous à la Section 4154 (fourni avec les documents de votre client) pour les déclarations de sécurité et de réglementation.

This page intentionally left blank.

# 1 Introduction

## 1.1 Overview

The rectifier provides load power, battery float current, and battery recharge current during normal operating conditions. The rectifier is a constant power design. The rectifier is rated at its maximum output power. This means that, within the normal operating ambient temperature range and input voltage range, the maximum available output power is a constant 2000W. Within these ranges, the rectifier operates in one of three modes, depending upon load demands. Transition between modes is completely automatic. If ambient temperature rises above or input voltage falls below acceptable values, the rectifier continues to operate but at derated output power levels.

- **Constant Voltage Mode:** For any initial output voltage setting from 42 to 58 volts, output voltage remains constant regardless of load. This is the normal operating condition, in which loads are being supplied and batteries are float charged. Rectifiers operate in the Constant Voltage Mode unless load increases to the point where the product of load current and output voltage is approximately 2000W.
- **Constant Power Mode:** As load increases above approximately 2000W (non-adjustable), output current continues to increase, but output voltage decreases as required to maintain constant output power. Rectifiers operate in the Constant Power Mode unless load continues to increase to the point where the current limit setting is reached.
- **Constant Current Mode:** If load increases to the current limit setting, output voltage decreases linearly to maintain output current at the current limit setting.

## 1.2 Specifications


### 1.2.1 DC Output Ratings



**NOTE!** A current limitation can be set by the User and the output voltage level is set through the controller.


- **Voltage:** Nominal -48 volts DC, positive ground. Output voltage is adjustable from -42 to -58 volts DC via the associated controller.
- **Output Power and Current:** 2000W (41.7A) @ 120/208/240VAC input and -48VDC output.
- **Output Characteristics:** Refer to **Figure 1.1** for a graph of output voltage vs. output current.

**Figure 1.1 Output Voltage vs. Output Current**

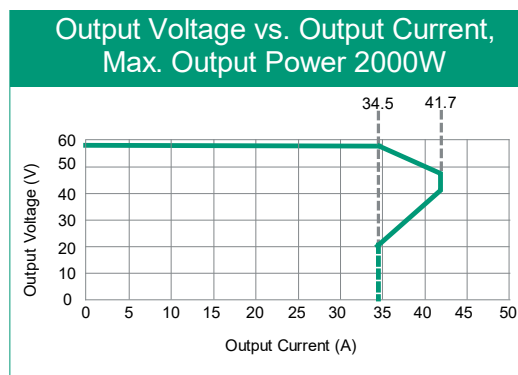

- **Power Derating Based on Input Voltage:** The rectifier power varies with changes in input voltage and output voltage. It uses an advanced power limitation method. The lower input threshold is 85 VAC. The rectifier can provide its maximum rated power (2000W) as long as the input voltage is within the range of 176 to 300VAC. Below 176 VAC, and down to 85 VAC, the rectifier will continue to operate normally but will be in a power derating mode. The relationship between the output power and input voltage is illustrated in **Figure 1.2**.

**Figure 1.2 Power Derating Based on Input Voltage**

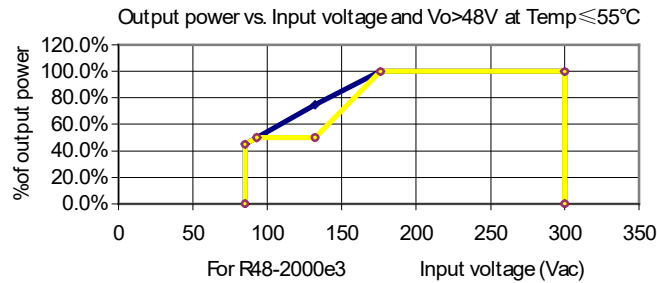

**NOTE! Blue Line:** Linear derating from 85V AC to 176V AC.

**Yellow Line:** Linear derating from 2000 watts at 176V AC to 1000 watts at 132V AC. Constant 1000 watts from 132V AC to 93V AC.

- **Power Derating Based on Temperature:** The rectifier delivers full power when operating at an ambient temperature of  $+55^\circ C$  ( $+131^\circ F$ ) or below. Each rectifier continuously monitors the ambient temperature surrounding the power conversion circuit. If this temperature for any reason (such as a high ambient temperature) increases above approximately  $+55^\circ C$  ( $+131^\circ F$ ), the rectifier will not shut down. Rather, the rectifier limits its maximum output power to maintain the temperature of the power conversion circuit within design parameters. Operation between  $+55^\circ C$  ( $+131^\circ C$ ) and  $+80^\circ C$  ( $+176^\circ F$ ) will result in output power being decreased. Full power capability is restored when the temperature decreases to below approximately  $+55^\circ C$  ( $+131^\circ F$ ). Refer to **Figure 1.3** to view the relationship between the output power and the ambient temperature.

Other power rating values are as follows (refer to **Figure 1.3**):


- At an ambient temperature of  $+65^\circ C$  ( $+149^\circ F$ ), the power delivered by the rectifier is 1800W.
- At an ambient temperature of  $+70^\circ C$  ( $+158^\circ F$ ), the power delivered by the rectifier is 1500W.



**WARNING!** The module is rated for continuous operation at full output power up to  $+55^\circ C$  ( $+131^\circ F$ ). Operation between  $+55^\circ C$  ( $+131^\circ F$ ) and  $+80^\circ C$  ( $+176^\circ F$ ) will result in output power decrease. Operation above  $+80^\circ C$  ( $+176^\circ F$ ) is considered abnormal and should be used on a temporary<sup>1</sup> basis only.

<sup>1</sup> **Temporary Operation at Abnormal Temperature:** Temporary operation is defined as a period of not more than eight consecutive hours per day, and a total of not more than 15 days in a year. (This refers to a total of 120 hours in any given year, but no more than 15 occurrences in that one-year period.)

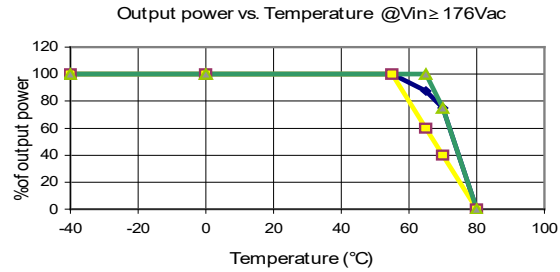

**Figure 1.3 Power Derating Based on Temperature**

**NOTE! Green Line:** at 200Vac < Vin < 250Vac and 50Vdc < Vout < 56Vdc.

**Blue Line:** at 176Vac < Vin < 300Vac and 48Vdc < Vout < 58Vdc, exclude Region1.

**Yellow Line:** 264Vac < Vin < 300Vac and Vout < 42Vdc.



**NOTE!** 2000W @ +65°C (+149°F) and 200Vac < Vin < 250Vac and 50Vdc < Vout < 56Vdc.

- Regulation:

- Static: Steady state regulation is ±0.6% as controlled within the rectifier for any and all combinations of load from no load to full load, input voltage, and input frequency at a constant ambient temperature. The associated system controller may provide increased regulation.
- Dynamic: For any step load change within the range of 10% to 90% of full load within 50 microseconds, per Telcordia GR-947-CORE, the maximum voltage transient will not exceed 5% of the initial steady state voltage within 50±10 microseconds. Recovery to within 1% of the initial steady state voltage does not exceed 1 milliseconds.

- Filtering:

- Voice Band Noise: Complies with Telcordia GR-947-CORE.

- Output noise according to Telcordia GR-947-CORE is < 38 dBnC typical at normal input and 20% to 70% of rated load for more than one rectifier.
- Psophometric noise is ≤ 2 mV typical at 20% to 70% of rated load for more than one rectifier.

- Wide Band Noise: Complies with Telcordia GR-947-CORE.

- Wideband noise emission is < 250 mV peak to peak between 0 Hz - 100 MHz, and < 50 mV rms in any 3 kHz band 10 KHz - 20 MHz.

## 1.2.2 AC Input Ratings

- Voltage: Nominal 120/208/240 volts AC, single phase, 3-wire, 50/60 Hz, with an operating range of 100 to 250 volts. Acceptable input frequency range is 45 to 65 Hz.


Permitted Variation: 85 to 300 VAC.

- Harmonic Content (THD): ≤5% from 50% to 100% of rated load. Meets EN61000-3-2.
- Inrush Current: Peak does not exceed 1.5 times of the peak value of the maximum steady-state input current at full load, nominal input voltage, and for any duration of AC input interrupts. Under the above conditions, standard AC distribution circuit breakers will not trip.

- Typical Input Data: 50 Hz input.
  - a) Refer to **Table 1.1**.
  - b) Maximum Input Current: Refer to **Table 1.2**.

**Table 1.1 Typical Input Data in 50Hz Input**

| Nominal Input Voltage | Percent of Full Load | Input Current (Amperes) | Input VA | Input Watts | Power Factor % | Efficiency % Heat | Heat Dissipation BTU/Hr |
|-----------------------|----------------------|-------------------------|----------|-------------|----------------|-------------------|-------------------------|
| 208                   | 0                    | 0.32                    | 70.80    | 33.20       | 46.90          | --                | 113.27                  |
|                       | 25                   | 2.24                    | 497.20   | 491.90      | 98.90          | 95.38             | 77.54                   |
|                       | 50                   | 4.71                    | 983.00   | 977.40      | 99.40          | 96.01             | 133.05                  |
|                       | 75                   | 7.08                    | 1476.10  | 1473.00     | 99.70          | 95.51             | 255.65                  |
|                       | 100                  | 9.53                    | 1980.00  | 1984.30     | 99.80          | 94.50             | 372.35                  |
|                       | 110                  | 10.30                   | 2144.00  | 2141.00     | 99.80          | 94.27             | 418.56                  |
|                       | 120                  | 10.34                   | 2151.00  | 2147.00     | 99.80          | 93.88             | 454.89                  |
| 240                   | 0                    | 0.32                    | 73.50    | 26.50       | 36.00          | --                | 90.41                   |
|                       | 25                   | 2.08                    | 499.80   | 490.80      | 98.00          | 95.58             | 74.01                   |
|                       | 50                   | 4.09                    | 983.90   | 974.70      | 99.00          | 96.27             | 124.04                  |
|                       | 75                   | 6.13                    | 1472.80  | 1466.30     | 99.50          | 95.94             | 203.11                  |
|                       | 100                  | 8.23                    | 1974.20  | 1968.90     | 99.70          | 95.24             | 319.75                  |
|                       | 110                  | 8.90                    | 2133.00  | 2129.00     | 99.70          | 94.87             | 372.63                  |
|                       | 120                  | 8.93                    | 2142.00  | 2138.00     | 99.70          | 94.38             | 409.95                  |

 **NOTE!** System output is initially adjusted to 54.48 volts DC as measured at the system sense point at 50% of full load and nominal input. "Percent of Full Load" refers to percent of 34.5 amperes.

**Table 1.2 Maximum Input Current in 50Hz Input**

| Nominal Input Voltage | Input Voltage | Input Current (Amperes) |
|-----------------------|---------------|-------------------------|
| 208/240               | 176           | 11.73                   |

 **NOTE!** At 100% of full load with output adjusted to 58 volts DC as measured at the shelf output terminals.

- Typical Input Data: 60 Hz input.
  - a) Refer to **Table 1.3**.
  - b) Maximum Input Current: Refer to **Table 1.4**.

**Table 1.3 Typical Input Data in 60Hz Input**

| Nominal Input Voltage | Percent of Full Load | Input Current (Amperes) | Input VA | Input Watts | Power Factor % | Efficiency % Heat | Heat Dissipation BTU/Hr |
|-----------------------|----------------------|-------------------------|----------|-------------|----------------|-------------------|-------------------------|
| 208                   | 0                    | 0.34                    | 73.20    | 29.60       | 40.43          | --                | 100.99                  |
|                       | 25                   | 2.39                    | 499.90   | 492.40      | 98.50          | 95.27             | 79.46                   |
|                       | 50                   | 4.73                    | 985.80   | 978.10      | 99.20          | 95.94             | 135.49                  |
|                       | 75                   | 7.09                    | 1479.60  | 1474.00     | 99.60          | 95.43             | 229.83                  |
|                       | 100                  | 9.54                    | 1985.80  | 1982.20     | 99.70          | 94.59             | 365.87                  |
|                       | 110                  | 10.31                   | 2147.00  | 2142.00     | 99.80          | 94.24             | 420.95                  |
|                       | 120                  | 10.35                   | 2154.00  | 2149.00     | 99.80          | 93.82             | 452.12                  |
| 240                   | 0                    | 0.36                    | 105.40   | 31.80       | 30.55          | --                | 108.5                   |
|                       | 25                   | 2.10                    | 504.70   | 491.00      | 97.20          | 95.59             | 73.88                   |
|                       | 50                   | 4.11                    | 989.30   | 975.90      | 98.60          | 96.18             | 127.19                  |
|                       | 75                   | 6.15                    | 1478.00  | 1469.60     | 99.30          | 95.73             | 214.10                  |
|                       | 100                  | 8.25                    | 1978.70  | 1972.20     | 99.60          | 95.08             | 331.10                  |
|                       | 110                  | 8.92                    | 2140.00  | 2132.00     | 99.60          | 94.78             | 379.70                  |
|                       | 120                  | 8.95                    | 2147.00  | 2140.00     | 99.60          | 94.32             | 414.71                  |



**NOTE!** System output is initially adjusted to 54.48 volts DC as measured at the system sense point at 50% of full load and nominal input. "Percent of Full Load" refers to percent of 34.5 amperes.

**Table 1.4 Maximum Input Current in 60Hz Input**


| Nominal Input Voltage | Input Voltage | Input Current (Amperes) |
|-----------------------|---------------|-------------------------|
| 208/240               | 176           | 11.73                   |



**NOTE!** At 100% of full load with output adjusted to 58 volts DC as measured at the shelf output terminals.

- Efficiency Curve: (Refer to **Figure 1.4**.)

**Figure 1.4 Efficiency Curve**

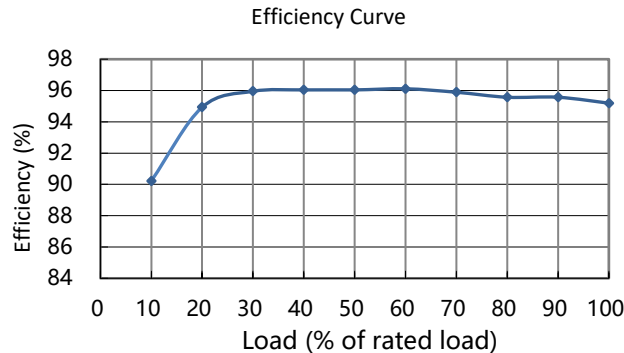

### 1.2.3 Environmental Ratings:

- Operating Ambient Temperature Range:
  - +55°C (+131°F) to +80°C (+176°F) with derating output.
  - 40°C (-40°F) to +55°C (+131°F) with full power performance.
- Temperature Coefficient: 0.02% per degrees Celsius.
- Storage Ambient Temperature Range: -40°C (-40°F) to +70°C (+158°F).
- Relative Humidity: This rectifier is capable of operating in an ambient relative humidity range of 0% to 95%, non-condensing.
- Altitude: 2000 m (6560 ft) at full power (power limited for heights above 2000 m).
- Surge Protection: Compliance with EN61000-4-5 (4kV Line to Line, 4kV Line to Earth). Capable of withstanding surges per ANSI/IEEE C 62.41 1999 Category B3 across the input terminals.



**NOTE!** This level of protection is a widely used standard for telecommunications power equipment. As with all such equipment, it is the end user's responsibility to provide an adequately sized Surge Suppression Device at the commercial power service entrance of the building that reduces all incoming surges to levels below the classes/categories stated for the equipment.

- Ventilation Requirements: The rectifiers are fan cooled and utilize front to back forced ventilation. A rectifier must be mounted so ventilating openings are not blocked and temperature of the air entering the rectifier does not exceed the Operating Ambient Temperature Range stated above.
- Single Rectifier Audible Noise: At 25°C ≤50dB(A) with fan in high speed. Measurement made at 0.6m distance in front of rectifier and at same horizontal line of the middle of rectifier.
- High Voltage Category: II
- Power Distribution System: TN/TT/IT



**NOTE!** The rectifier module is recommended to be used in an environment with Pollution of Degree 2 or less. Pollution Degree 2 applies where there is only non-conductive pollution that might temporarily become conductive due to occasional condensation (such as the office environment).

- EMI/RFI Suppression:
  - a) Rectifiers operating in an approved rectifier mounting shelf conform to the requirements of FCC rules Part 15, Class B for Radiated and Conducted emissions limits.
  - b) Rectifiers operating in an approved rectifier mounting shelf conform to the requirements of European Norm, EN55022, Class B for Radiated and Conducted emissions limits.

## 1.2.4 Compliance Information

- EMC: ETSI EN 300 386, FCC CFR 47 Part 15 class B, Telcordia GR-1089-CORE.
- EMI Load Range: 10-100%.
- Safety: IEC 60950, EN 60950, UL 60950.
- GR-3108 Class 2 Compliant

## 1.2.5 Standard Features

- Type of Power Conversion Circuit: High frequency.
- Constant Voltage Mode: For any initial output voltage setting from 42 to 58 volts, output voltage remains constant regardless of load. This is the normal operating condition, in which loads are being supplied and batteries are float charged. Rectifiers operate in the Constant Voltage Mode unless load increases to the point where the product of load current and output voltage is approximately 2000W.
- Constant Power Mode: As load increases above approximately 2000W (non-adjustable), output current continues to increase, but output voltage decreases as required to maintain constant output power. Rectifiers operate in the Constant Power Mode unless load continues to increase to the point where the current limit setting is reached.
- Constant Current Mode: If load increases to the current limit setting, output voltage decreases linearly to maintain output current at the current limit setting.
- Input Protection:
  - a) Input Over/Under Voltage Protection: The rectifier will shut down at low or high voltage input; based on the following voltage levels:
    1. Low Voltage Disable Point: 80V,  $\pm 5$  V; hysteresis is 15 VAC for restart.
    2. High Voltage Disable Point: 305V,  $\pm 5$  V; hysteresis is 10 VAC for restart.
  - b) Between 85 V and 176 V the output power will be derated linearly based on the input voltage as follows:
    1. At input voltage of 85V with output >48V, max output power is 800W.
    2. At input voltage of 120V with output >48V, max output power is 1364W.
    3. At input voltage of 154V with output >48V, max output power is 1750W.
    4. At input voltage of 176V and output >48V, max output power is 2000W.

- Output Protection:
  - a) Overload / Reverse Current: The rectifier has a 63A fuse in the negative output DC bus. This fuse is not customer replaceable. The rectifier can be plugged into or pulled out of a shelf while operating, without damage or opening the fuse.
  - b) Current Limiting: The rectifier has a current limit function. The current limit point can be set between the range of 4 to 41.7 A, adjustable via the controller. The current limit accuracy is  $\pm 1.5A$  when the output voltage ranges from 42 to 58 V. Below 42 V the current will fold back to a lower value.
  - c) Advanced Current Limit Function: The rectifier has an advanced Current Limit Function. When a short circuit occurs at the rectifier output terminals, the rectifier will keep its output current at a value below the maximum current limit set point. This function effectively protects the rectifier and the equipment connected to the rectifier. When the short circuit fault is cleared, the rectifier will automatically restore back to normal operation.
  - d) High Voltage Shutdown:
    1. Adjustable Control: If rectifier output voltage exceeds an adjustable preset value and the rectifier is delivering more than 10% of its rated current, the rectifier shuts down. (Adjustable from 56 VDC to 59 VDC via the controller. The restart hysteresis is 0.5 V  $\pm$ 0.2 V.)  
  
The rectifier then restarts and a HVSD restart timer starts (time value configurable via the controller, factory default is 5 minutes). If output voltage again exceeds the high voltage shutdown value before the HVSD restart timer expires, the rectifier shuts down and locks out. Manual restart is then required (by turning power to the rectifier off or by removing the rectifier, waiting until the LEDs on the rectifier extinguish, then turning power to the rectifier on or re-inserting the rectifier). If the rectifier does not experience a high voltage condition before the HVSD restart timer expires, the restart circuit is reset.  
  
If two or more rectifiers are paralleled, only the rectifier causing the high voltage condition shuts down.
    2. Backup: If rectifier output voltage exceeds 59.5 V  $\pm$ 0.5 V (non-adjustable) and the rectifier is delivering more than 10% of its rated current, the rectifier shuts down. The rectifier then restarts and a HVSD restart timer starts (time value configurable via the controller, factory default is 5 minutes). If output voltage again exceeds the high voltage shutdown value before the HVSD restart timer expires, the rectifier shuts down and locks out. Manual restart is then required (by turning power to the rectifier off or by removing the rectifier, waiting until the LEDs on the rectifier extinguish, then turning power to the rectifier on or re-inserting the rectifier).
- Over-Temperature Protection: The rectifier provides over temperature protection by derating output power and recovers automatically.
- Active Load Sharing: The rectifier uses advanced digital active load sharing technology that maintains balancing to within 3% of rated current.
- Hot Swappable: The rectifier is designed to be plug-and-play. The rectifier can be inserted or removed from a live DC power system with no damage. When the rectifier is plugged into the system, the system output voltage will not be affected.
- Cooling: Each rectifier module contains a fan for front-to-back force air-cooling.
  - a) Fan Fault Protection: The rectifier module shuts down and its alarm indicator (red) flashes if the fan fails. Fan failure is detected and reported to controller. The fan is field replaceable.
  - b) Fan Control: Fan speed is continuously variable. When input voltage is within normal range, the built-in processor adjusts fan speed according to the rectifier module's internal temperature and output power. For example, a higher temperature or output power increases the fan speed. This feature can be disabled via the controller, allowing the fan to run at full speed regardless of temperature.

- Paralleling: Up to 32 rectifiers can be connected in parallel in one system.
- Communication Failure: The rectifier's protection indicator (yellow) will flash should it experience a communication failure. The failure information will be reported to the controller and the controller will process the failure accordingly. During a communication failure, in order to protect the battery, the rectifier output voltage will automatically be adjusted as follows.
  - The rectifier default factory output voltage is 53.5V.
  - Once power is applied to the rectifier and the rectifier is recognized by the controller, the output voltage is updated to the setting programmed into the controller.
  - If communications with an SCU+ controller is lost, rectifier output voltage goes to a default value programmed into the controller (this is a separate programmable parameter from the output voltage setting).
  - If communications with an ACU+ or NCU controller is lost, rectifier output voltage goes to the last communicated float output voltage setting in the controller (the last communicated float output voltage setting is stored in the rectifier).
  - The rectifier will revert to normal operation once normal communication to the controller is restored.
- Rectifier Output Current Imbalance:
  - a) When the average current of all rectifiers is greater than 20% of full rated current, and the difference between local rectifier current and average current is greater than 16% of full rated current, the yellow protection indicator will illuminate.
  - b) When the average current of all rectifiers is greater than 10% of full rated current, and local rectifier current is less than 2% of full rated current, then the red fault indicator will illuminate.
- Monitoring Function: The rectifier has a built-in advanced DSP that monitors and controls the operation of the rectifier. The DSP also communicates with the controller in real time through the CAN bus. **Table 1.5** lists the different commands and information exchanged between the rectifier and the controller.

**Table 1.5 Exchange of Information between Rectifier and Controller**

| Commands / signals that can be received by the Rectifier Module from the Controller.  | Information gathered by the Controller from the Rectifier Module.  |
|---|--|
| <ul style="list-style-type: none"> <li>• Turn On/Off</li> <li>• Current Walk-in On/Off</li> <li>• HVSD (High Voltage Shutdown) Reset</li> <li>• Current Limit Adjustment</li> <li>• Voltage Regulation</li> </ul> | <ul style="list-style-type: none"> <li>• Input Voltage</li> <li>• Output Voltage</li> <li>• Output Current</li> <li>• Current Limit Setting</li> <li>• Temperature</li> <li>• Over Voltage Setting</li> <li>• On/Off Status</li> <li>• Fault Alarms, such as:                             <ul style="list-style-type: none"> <li>HVSD</li> <li>Fan Fail</li> </ul> </li> <li>• Protection Alarms, such as:                             <ul style="list-style-type: none"> <li>Input Voltage Protection</li> <li>Inner DC Bus Voltage Protection</li> <li>High Temperature Protection</li> </ul> </li> <li>• Thermal Derating</li> <li>• AC Derating</li> <li>• AC Fail</li> <li>• Imbalance Output Current</li> <li>• Address</li> <li>• Code</li> <li>• Date</li> <li>• Software Version</li> <li>• Hardware Version</li> </ul> |

## 1.2.6 Mechanical Specifications

- Dimensions:
  - a) Millimeters: 42.0 (Height) X 84.5 (Width) X 252.5 (Depth)
  - b) Inches: 1.7 (Height) X 3.3 (Width) X 9.9 (Depth)
- Weight: 1.13 kg (2.49 lbs)
- Indicators:
  - a) Power (Green LED)
  - b) Protection (Yellow LED)
  - c) Alarm (Red LED)



## 2 Operation

### 2.1 AC Input Protection Device Requirements/Recommendations

Refer to the system documentation supplied with the system the rectifier is installed in.

### 2.2 Local Indicators


Location and Identification: Refer to **Figure 2.1**.

Description: There are three (3) indicators located on the rectifier's front panel. The functions of these indicators are as shown in **Table 2.1**.






**NOTE!** DC voltage must be present at the rectifier output terminals (from battery or an operating rectifier) or AC voltage at the input terminals.

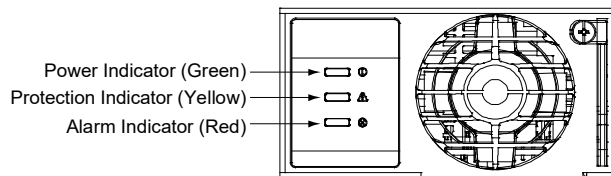**Figure 2.1** Local Indicator Locations



**Table 2.1** Rectifier Module Indicators

| Indicator   | Normal State        | Alarm State | Alarm Cause  |
|---|---------------------|-------------|--|
|  | Power (Green)       | On          | No input voltage.<br>Internal input fuse open.   |
|   |                     | Flashing    | The rectifier is being identified by the controller.   |
|  | Protection (Yellow) | On          | AC input under/over voltage.<br>PFC output under/over voltage.<br>Moderate load sharing imbalance.<br>Rectifier not inserted into the slot completely.<br>Rectifier over-temperature protection.<br>Rectifier modules are operating in an output power derating mode (rectifiers derate when module temperature rises above or input voltage falls below acceptable values).<br>Rectifier in ECO Standby Mode when ECO Mode is active in controller. |
|   |                     | Flashing    | Loss of communication with the controller (the rectifier can provide power).   |
|  | Alarm (Red)         | On          | Severe load sharing imbalance.<br>Rectifier module output disabled for any reason, including overvoltage shutdown and internal output fuse open.<br>Rectifier addresses contradictory.   |
|   |                     | Flashing    | Fan not operating (rectifier module shuts down).   |

### 2.3 Rectifier High Voltage Shutdown and Lockout Restart

#### Procedure

1. Turn the power to the rectifier off or remove the rectifier, wait 30 seconds or more (until the LEDs on the rectifier extinguish), then turn the power to the rectifier on or re-insert the rectifier.

## 2.4 Rectifier Current Limit

When setting total rectifier current limit, the set point to each rectifier is the total set point divided by the number of rectifiers. For example, if the system contains five rectifiers and the current limit is set to 150 amps then each rectifier has a current limit set point of 30 amps. If one or more rectifiers are removed or fail it will take several seconds for the individual set points to the remaining rectifiers to be reset. In the example given, if one rectifier is removed the current limit set point will drop to 120 amps (30 amps times four remaining rectifiers) until the controller can send updated set points to the remaining rectifiers. This takes a couple communication cycles (several seconds) after which each rectifier would have a new set point of 37.5 amps for a total of 150 amps. The total current limit of the rectifiers should not be set such that the loss of the redundant rectifiers will cause this temporary set point to drop below the actual maximum expected load. If batteries are used on the rectifier output, the batteries should support the load until the current limit set points can be re-established due to loss of a rectifier.

## 2.5 Installing Rectifiers

Rectifier modules can be inserted or removed with power applied (hot swappable).



**NOTE!** Each rectifier module locks into a module mounting shelf by means of a latch located on the bottom of the module. The latch and rectifier module handle are interactive. Pushing the handle up into the module's front panel causes the latch to extend to the locking position; pulling the handle down out



**CAUTION!** This rectifier module contains Double pole fusing; parts of the equipment that remain energized might represent a hazard during servicing after operation of the fuse. If the rectifiers are connected to a 3-phase system, the neutral line should also have a fuse.



**WARNING!** To prevent damage to the latching mechanism, ensure the handle is in the open position when installing or removing a rectifier module. NEVER hold the handle in the closed position when installing a rectifier module into a shelf.


### Procedure



**NOTE!** Refer to **Figure 2.2** as this procedure is performed.

1. Unpack the module.
2. Place the module into an unoccupied mounting slot without sliding it in completely.
3. Loosen the captive screw on the module's handle. Pull the handle down out from the module's front panel (this will also retract the latch mechanism). See **Figure 2.2**.
4. Push the module completely into the shelf.
5. Push the handle up into the module's front panel. This will lock the module securely to the shelf. Tighten the captive screw on the handle.
6. Repeat the above steps for each rectifier module being installed in the system.
7. After the rectifier modules are physically installed in the mounting shelf(s), they are ready for operation immediately after power is supplied to them.
8. Certain functions (i.e. rectifier current limit, rectifier addressing) may require adjustment when adding or replacing a rectifier module. Refer to "Rectifier Current Limit" on page 12 and the Power System documentation for instructions.

Figure 2.2 Installing Rectifier Module

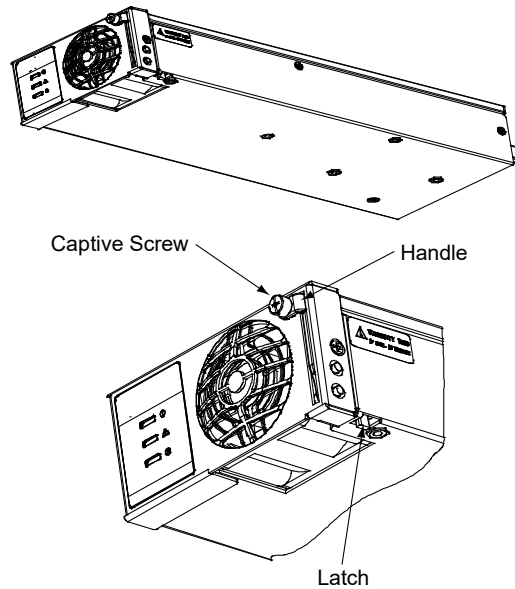

## 3 Troubleshooting and Repair

### 3.1 Troubleshooting

#### 3.1.1 Rectifier Current Sharing Imbalance

When multiple rectifiers are operating in parallel and the load is greater than 10%, if the current sharing imbalance among them is greater than 3%, check if the rectifier is properly seated in the shelf.




If the current sharing imbalance still persists following the verification suggested above, replace the rectifier exhibiting the current imbalance.

#### 3.1.2 Rectifier Fault Symptoms and Troubleshooting

The fault indicators that can be displayed by the rectifier are as follows. Refer to **Table 3.1** for a list of possible causes and corrective actions.

- Power Indicator (Green) Off
- Protection Indicator (Yellow) ON
- Protection Indicator (Yellow) Flashing
- Alarm Indicator (Red) ON
- Alarm Indicator (Red) Flashing

**Table 3.1 Rectifier Module Troubleshooting**

| Symptom   |  | Possible Cause(s)   | Suggested Action(s)  |
|---|--|---|--|
|    | Power Indicator (Green) Off  | No input voltage.   | Make sure there is input voltage.  |
|   |  | Internal input fuse open.   | Replace the rectifier.   |
|    | Protection Indicator (Yellow) On   | AC input under/over voltage.  | Correct the AC input voltage to within the acceptable range.   |
|   |  | PFC under/over voltage.   | Replace the rectifier.   |
|   |  | Moderate load sharing imbalance.  | Check if the rectifier is properly seated in the shelf. If this does not correct the fault, replace the rectifier.   |
|   |  | Rectifier not inserted into the slot completely.  | Remove and properly insert the rectifier.  |
|   |  | Rectifier over-temperature protection.  | Fan rotor blocked: remove any object that may be blocking the fan.<br>Ventilation blocked (inlet or outlet): remove any object that may be blocking the inlet or outlet.<br>Ambient temperature too high or rectifier inlet too close to a heat source: lower the ambient temperature or relocate the heat source. |
|   | Rectifier in ECO Standby Mode when ECO Mode is active in controller.     | --  |  |
| Protection Indicator (Yellow) Flashing  | Loss of communication with controller (the rectifier can provide power). | Check the communication cables.<br>Remove and properly insert the rectifier.  |  |
|  | Alarm Indicator (Red) On   | Severe load sharing imbalance.<br>Rectifier output disabled for any reason, including overvoltage shutdown and internal output fuse open. | Turn AC power to the rectifier off or remove the rectifier, wait 30 seconds or more (until the LEDs on the rectifier extinguish), then turn the AC power to the rectifier on or re-insert the rectifier. If rectifier fails to start, shuts down again, or load sharing imbalance persists; replace the rectifier. |
|   |  | Rectifier module addresses contradictory.   | Replace the rectifier.   |
|   | Alarm Indicator (Red) Flashing   | Fan not operating (rectifier module shuts down).  | Replace the fan.   |

## 3.2 Replacement Procedures

### 3.2.1 Rectifier Module Replacement

Rectifier modules can be inserted or removed with power applied (hot swappable).



**NOTE!** Each rectifier module locks into a module mounting shelf by means of a latch located on the bottom of the module. The latch and rectifier module handle are interactive. Pushing the handle up into the module's front panel causes the latch to extend to the locking position; pulling the handle down out from the module's front panel causes the latch to retract. See **Figure 2.2**



**DANGER!** Take care when removing a rectifier module that was in operation, as rectifier module surfaces could be very hot.



**WARNING!** To prevent damage to the latching mechanism, ensure the handle is in the open position when installing or removing a rectifier module. NEVER hold the handle in the closed position when installing a rectifier module into a shelf.

#### **Procedure**



**NOTE!** Refer to **Figure 2.2** as this procedure is performed.

1. Performing this procedure may activate external alarms. Do one of the following. If possible, disable these alarms. If these alarms cannot be easily disabled, notify the appropriate personnel to disregard any alarms associated with this system while this procedure is performed.
2. Loosen the captive screw on the module's handle. Pull the handle down out from the module's front panel (this will also retract the latch mechanism). See **Figure 2.2**.
3. Grasp the handle and pull firmly to remove the module from the shelf.
4. Place the replacement rectifier module into the mounting position without sliding it in completely.
5. Loosen the captive screw on the module's handle. Pull the handle down out from the module's front panel (this will also retract the latch mechanism). See **Figure 2.2**.
6. Push the module completely into the shelf.
7. Push the handle up into the module's front panel. This will lock the module securely to the shelf. Tighten the captive screw on the handle.
8. Certain functions (i.e. rectifier current limit, rectifier addressing) may require adjustment when adding or replacing a rectifier module. Refer to "Rectifier Current Limit" on page 12 and the Power System documentation for instructions.
9. After the rectifier modules are physically installed in the mounting shelf(s), they are ready for operation immediately after power is supplied to them. Verify that the rectifiers are operating normally.
10. Enable the external alarms, or notify appropriate personnel that this procedure is finished.
11. Ensure that there are no local or remote alarms active on the system.

## 3.2.2 Rectifier Fan Replacement

Each rectifier uses a fan (P/N: 32010474) for cooling. If fan replacement should become necessary, perform the following procedure.

Refer to **Figure 3.1** as this procedure is performed.



**WARNING!** In a system with NO redundant rectifier, battery must have sufficient reserve to power the load(s) while the rectifier is removed for fan replacement.




**NOTE!** When performing any step in this procedure that requires removal of existing hardware, retain all hardware for use in subsequent steps.

### **Procedure**

1. Performing this procedure may activate external alarms. Do one of the following. If possible, disable these alarms. If these alarms cannot be easily disabled, notify the appropriate personnel to disregard any alarms associated with this system while this procedure is performed.
2. Remove the rectifier from the shelf. Refer to a previous procedure for step-by-step instructions.
3. Place the rectifier on a static-safe work surface. Connect an approved grounding strap to your wrist for the remainder of this procedure.
4. On this rectifier; remove the front panel by removing the three (3) screws securing the front panel to the chassis.
5. For proper orientation of the new fan, observe the location of the fan wires and the fan rotation and air flow arrows on the old fan.
6. Carefully remove the fan from the rectifier chassis and unplug the fan power cable from the printed circuit card.
7. Plug the power cable of the replacement fan into the connector on the printed circuit card. Carefully slide the replacement fan into the rectifier chassis (ensure the fan wires and fan rotation and air flow arrows match the orientation of the old fan).
8. Note that the fan has four holes in the front corners and that the faceplate has three tabs. Carefully slide the faceplate into position, aligning the fan holes with the faceplate tabs. Secure the faceplate to the rectifier chassis with the three (3) screws previously removed.
9. Replace the rectifier into the shelf. Refer to the previous procedure for step-by-step instructions.
10. When the fan starts, check to ensure that it is providing front-to-back airflow. If air direction is wrong, immediately remove the rectifier from the shelf. Repeat previous steps to check fan orientation, and correct as necessary. Reinstall the rectifier and again check for proper airflow.
11. Enable the external alarms, or notify appropriate personnel that this procedure is finished.
12. Ensure that there are no local or remote alarms active on the system.

Figure 3.1 Fan Replacement

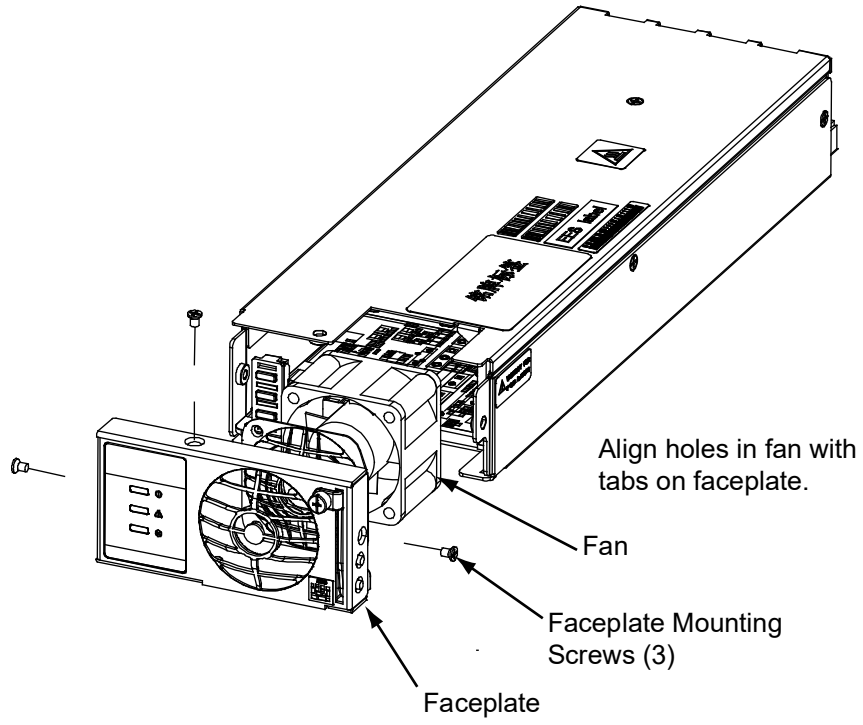

This page intentionally left blank.



## Connect with Vertiv on Social Media



<https://www.facebook.com/vertiv/>



<https://www.instagram.com/vertiv/>



<https://www.linkedin.com/company/vertiv/>



<https://www.twitter.com/vertiv/>



---

Vertiv.com | Vertiv Headquarters, 1050 Dearborn Drive, Columbus, OH, 43085, USA

© 2022 Vertiv Group Corp. All rights reserved. Vertiv™ and the Vertiv logo are trademarks or registered trademarks of Vertiv Group Corp. All other names and logos referred to are trade names, trademarks or registered trademarks of their respective owners. While every precaution has been taken to ensure accuracy and completeness here, Vertiv Group Corp. assumes no responsibility, and disclaims all liability, for damages resulting from use of this information or for any errors or omissions. Specifications, rebates and other promotional offers are subject to change at Vertiv's sole discretion upon notice.